

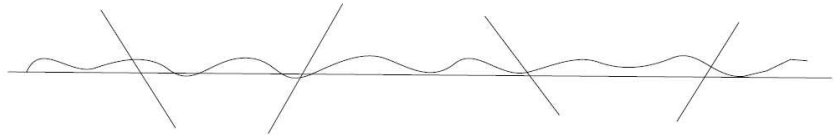


Crack Treatment

1.  crack

2.  cut the crack

3.  cut the cracks in angle 45°

4.  clean it and prime it, put stainless fibers in the angled cracks before priming



waved stainless steel fiber

5. fill the crack with a slurry made from Plastifloor® 510 resin and s/l-filler 1:1

done